


LANCOM R&S® UF-100 / UF-200

Quick Reference Guide

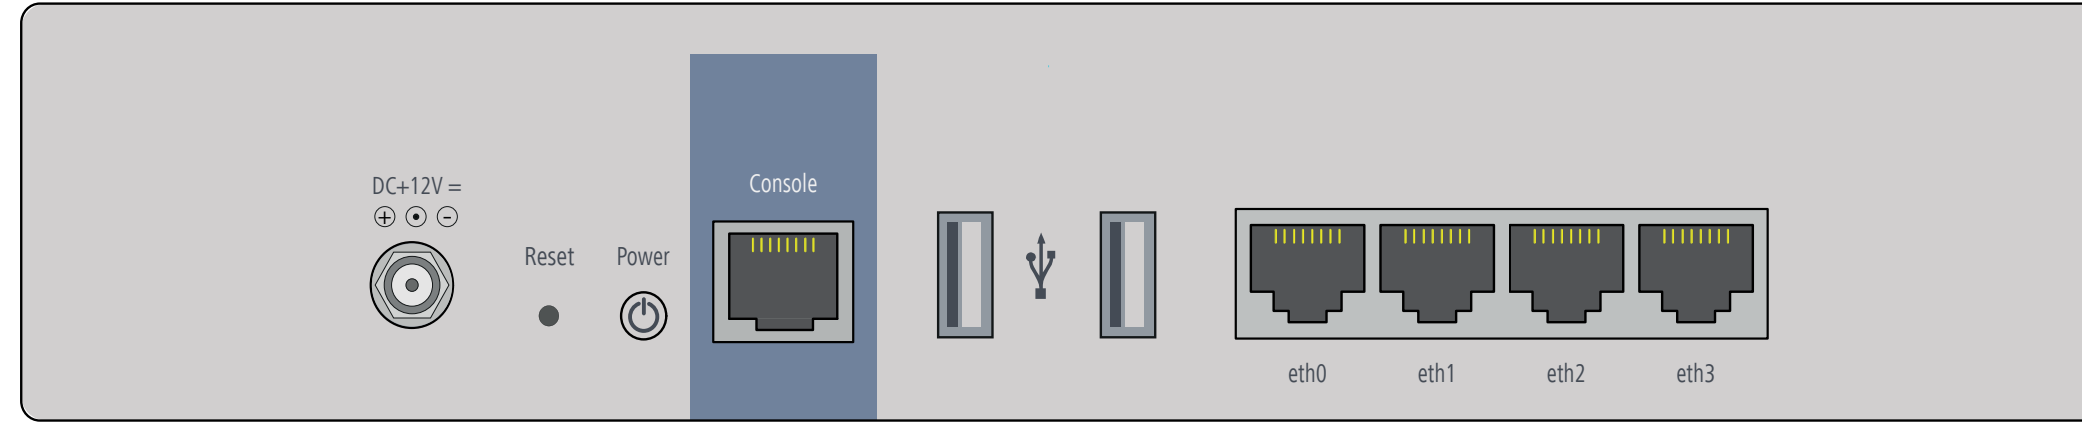

- ① **Connection socket for power supply**
After connecting the power supply cable to the device, turn the screwcap clockwise to prevent the jack from accidental unplugging. Use only the supplied power adapter.
- ② **Power button**
Press the power button to start up the device.
- ③ **Serial configuration interface RJ45 (Console)**
Maintenance interface for expert configuration
- ④ **USB 2.0 interfaces**
Interfaces for device software re-installation
- ⑤ **TP Ethernet interfaces eth0 - eth3**
Connect the eth0 - eth3 TP Ethernet interfaces with the enclosed Ethernet cable to your configuration PC or other networking components. Initial setup advice can be found in the supplied quick install guide.



Please observe the following when setting up the device

- > The mains plug of the device must be freely accessible.
- > Do not rest any objects on top of the device and do not stack multiple devices.
- > Keep the device's ventilation slots clear of obstruction.
- > Mount the device into a 19" unit in a server rack using the separately available rack mount.

Before initial startup, please make sure to take notice of the information regarding the intended use under www.lancom-systems.com/safety!
Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

MOUNTING AND CONNECTING THE DEVICE



① LEDs eth0 - eth3 - TP Ethernet

Both off	No networking device attached
Upper orange, permanently	Data transfer 1000 Mbps
Lower orange, flickering	
Upper green, permanently	Data transfer 100 Mbps
Lower orange, flickering	
Upper off	Data transfer 10 Mbps
Lower orange, flickering	

①

②

② LEDs Power / HDD

Power off	Device switched off
Power green	Device operational
HDD off	no HDD read-/write access
HDD orange, flickering	HDD read-/write access

① LEDs eth0 - eth3 - TP Ethernet

Both off	No networking device attached
Upper orange, permanently	Data transfer 1000 Mbps
Lower orange, flickering	
Upper green, permanently	Data transfer 100 Mbps
Lower orange, flickering	
Upper off	Data transfer 10 Mbps
Lower orange, flickering	

② LEDs Power / HDD

Power off	Device switched off
Power green	Device operational
HDD off	no HDD read-/write access
HDD orange, flickering	HDD read-/write access

Hardware	
Power supply	12 V DC, external power supply
Power consumption	Max. 36 W
Environment	Temperature range 0–40 °C; humidity 5–90 %; non-condensing
Housing	Robust metal housing, network connectors on the front
Dimensions (mm)	220 x 44 x 176 (W x H x D)
Interfaces	
ETH	4x 10 / 100 / 1000 Mbps Gigabit Ethernet ports
USB	2x USB 2.0 ports
Console	RJ45 configuration interface
Declaration of conformity	
Hereby, LANCOM Systems GmbH Adenauerstrasse 20/B2 D-52146 Wuersele, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: www.lancom-systems.com/doc	
Package content	
Documentation	Quick Reference Guide (DE/EN), Quick Install Guide (DE/EN), Service & Support Guide (DE/EN)
Accessories	1 Ethernet cable; 1 power supply unit with IEC power cable; 1 serial configuration cable; 1 set adhesive rubber pads